

9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

Human VEGFA ELISA Kit

Catalog Number: EA100376

Assay Principle

The OriGene Human VEGFA Pre-Coated ELISA (Enzyme-Linked Immunosorbent Assay) kit is a solid phase immunoassay specially designed to measure Human VEGFA with a 96-well strip plate that is pre-coated with antibody specific for VEGFA. The detection antibody is a biotinylated antibody specific for VEGFA. The capture antibody is monoclonal antibody from mouse, the detection antibody is polyclonal antibody from goat. The kit contains recombinant Human VEGFA with immunogen: Expression system for standard: NSO; Immunogen Sequence: A27 – R191. The kit is analytically validated with ready to use reagents.

To measure Human VEGFA, add standards and samples to the wells, then add the biotinylated detection antibody. Wash the wells with PBS or TBS buffer, and add Avidin-Biotin-Peroxidase Complex (ABC-HRP). Wash away the unbounded ABC-HRP with PBS or TBS buffer and add TMB. TMB is substrate to HRP and will be catalyzed to produce a blue color product, which changes into yellow after adding acidic stop solution. The density of the yellow product is linearly proportional to Human VEGFA in the sample. Read the density of the yellow product in each well using a plate reader, and benchmark the sample wells' readings against the standard curve to determine the concentration of Human VEGFA in the sample.

Overview

Product Name	Human VEGFA ELISA Kit
Reactive Species	Human
Size	96wells/kit, with removable strips.
•	Sandwich High Sensitivity ELISA kit for Quantitative Detection of Human COMT. 96wells/kit, with removable strips.
	<1 pg/ml *The sensitivity or the minimum detectable dose (MDD) is the lower limit of target protein that can be detected by the kit. It is determined by adding two standard deviations to the mean O.D. value of twenty (20) blank wells and calculating the corresponding concentration.
Detection Range	31.25 pg/ml- 2000 pg/ml
_	Store at 4°C for 6 months, at -20°C for 12 months. Avoid multiple freeze-thaw cycles (Shipped with wet ice.)
Uniprot ID	P15692



9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

Technical Details

_ ·	The capture antibody is monoclonal antibody from mouse, the detection antibody is polyclonal antibody from goat.
Specificity	Natural and recombinant Human VEGFA
Immunogen	Expression system for standard: NSO; Immunogen Sequence: R27 - R191
Cross Reactivity	There is no detectable cross-reactivity with other relevant proteins.

Notice Before Application

Please read the following instructions before starting the experiment.

- 1. To inspect the validity of experiment operation and the appropriateness of sample dilution proportion, pilot experiment using standards and a small number of samples is recommended.
- 2. Before using the Kit, spin tubes and bring down all components to the bottom of tubes.
- 3. Don't let 96-well plate dry, for dry plate will inactivate active components on plate.
- 4. Don't reuse tips and tubes to avoid cross contamination.
- 5. Avoid using the reagents from different batches together.

Kit Components/Materials Provided

Description	Quantity	Volume	Storage of opened/reconstituted material
Anti-Human VEGFA Pre-coated 96-well strip microplate	1	12 strips of 8 wells	Return unused wells to the foil pouch. Reseal along the entire edge of the zip- seal. May be stored or up to 1 month at 4°C provided this is withing the expiration date of the kit.
Human VEGFA Standard	2	10ng/tube	Discard the VEGFA stock solution after 12 hours at 4°C. May be stored at - 20°C for 48 hours.
Human VEGFA Biotinylated antibody (100x)	1	100 μΙ	May be stored for up to 1 month at 4°C provided this is within the expiration
Avidin-Biotin-Peroxidase Complex (100x)	1	100 μΙ	date of the kit.
Sample Diluent	1	30ml	
Antibody Diluent	1	12ml	
Avidin-Biotin-Peroxidase Diluent	1	12ml	
Color Developing Reagent (TMB)	1	10ml	
Stop Solution	1	10ml	
Wash Buffer (25x)	1	20 ml	
Plate Sealers	4	Piece	



9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

Required Materials That Are Not Supplied

Microplate Reader capable of reading absorbance at 450nm.

Automated plate washer (optional)

1000ml of 1X wash buffer (TBS or PBS)

 $Pipettes \ and \ pipette \ tips \ capable \ of precisely \ dispensing \ 0.5 \ \mu l \ through \ 1 \ ml \ volumes \ of \ aqueous \ solutions.$

Multichannel pipettes are recommended for large amount of samples.

Deionized or distilled water.

500ml graduated cylinders.


Test tubes for dilution.

Human VEGFA ELISA Kit (EA100376) Standard Curve Example

 $Highest\,O.D.\,value\,might\,be\,higher\,or\,lower\,than\,in\,the\,example.\,The\,experiment\,result\,is\,statistically\,significant\,if\,the\,highest\,O.D.\,value\,is\,no\,less\,than\,1.0.$

Concentration	on O	31.25	62.5	125	250	500	1000	2000
(pg/ml)								
O.D.	0.020	0.055	0.113	0.189	0.345	0.589	1.106	1.913

Human VEGFA ELISA Kit standard curve

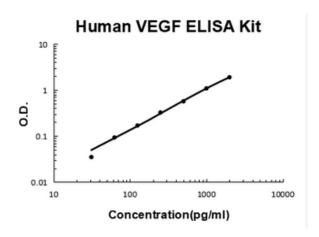

A standard curve is provided for demonstration only. A standard curve should be generated for each set of samples assayed.

Intra/Inter Assay Variability

 $Or iGene \, spend \, great \, efforts \, in \, documenting \, lot \, to \, lot \, variability \, and \, make \, sure \, our \, assay \, kits \, produce \, robust \, data \, that \, are \, reproducible.$

Intra-Assay Precision (Precision within an assay): Three samples of known concentration were tested on one plate to assess intra-assay precision.

Inter-Assay Precision (Precision across assays): Three samples of known concentration were tested in separate assays to assess inter-assay precisio



9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

	In	tra-Assay Precision		Inter-Assay	/ Precision	
Sample	1	2	3	1	2	3
n	16	16	16	24	24	24
Mean(pg/ml)	72	270	946	76	254	955
Standard deviation	4.53	21.33	59.59	9.62	24.38	74.49
CV(%)	9.6 %	7.9 %	9.6 %	7.8 %	9.6 %	7.8%

Reproducibility

To assay reproducibility, three samples with differing target protein concentrations were assayed using four different lots.

Lots	Lot1 (pg/ml)	Lot2 (pg/ml)	Lot3 (pg/ml)	Lot4 (pg/ml)	(, 5, ,	Standard Deviation	CV (%)
Sample 1	72	80	82	71	76	4.81	6.3 %
Sample 2	270	267	252	245	258	10.35	4 %
Sample 3	946	897	1026	1037	976	<i>57.7</i> 9	5.9 %

^{*}number of samples for each test n=16.

Preparation Before The Experiment

Item	Preparation
All reagents	Bring all reagents to 37°C prior to use. The assay can also be done at room temperature however we recommend doing it at 37°C for best consistency with our QC results. Also the TMB incubation time estimate (15-25min) is based on 37°C.
Wash buffer	Prepare 500 ml of Working Wash Buffer by diluting the supplied 20 ml of Wash Buffer (25x) with 480 ml of deionized or distilled water. If crystals have formed in the concentrate, warm to room temperature and mix it gently until crystals have completely dissolved.
Biotinylated Anti-Human VEGFA antibody	It is recommended to prepare this reagent immediately prior to use by diluting the Human VEGFA Biotinylated antibody $(100x)1:100$ with Antibody Diluent. Prepare 100μ l by adding 1μ l of Biotinylated antibody $(100x)to99\mu$ l of Antibody Diluent for each well. Mix gently and thoroughly and use within 2 hours of generation.
Avidin-Biotin-Peroxidase Complex	It is recommended to prepare this reagent immediately prior to use by diluting the Avidin-Biotin-Peroxidase Complex (100x) 1:100 with Avidin-Biotin-Peroxidase Diluent. Prepare 100 μ l by adding 1 μ l of Avidin-Biotin-Peroxidase Complex (100x) to 99 μ l of Avidin-Biotin-Peroxidase Diluent for each well. Mix gently and thoroughly and use within 2 hours of generation.
Human VEGFA Standard	It is recommended that the standards be prepared no more than 2 hours prior to performing the



9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

	experiment. Use one 10 ng of lyophilized Human VEGFA standard for each experiment. Gently spin the vial prior to use. Reconstitute the standard to a stock concentration of 10 ng/ml using 1 ml of sample diluent. Allow the standard to sit for a minimum of 10 minutes with gentle agitation prior to making dilutions.
Microplate	The included microplate is coated with capture antibodies and ready-to-use. It does not require additional washing or blocking. The unused well strips should be sealed and stored in the original packaging.
Samples	Dilute the sample so that the expected range of concentrations fall withing the detection range of this kit. If the expected range of concentration is unknown, a pilot test should be conducted to decide the optimal dilution ratio for your sample.

Dilution of Human VEGFA Standard

- 1. Number tubes 1-8. Final Concentrations to be Tube # 1-2000 pg/ml, #2-1000 pg/ml, #3-500 pg/ml, #4-250 pg/ml, #5-125 pg/ml, #6-62.50 pg/ml, #7-31.25 pg/ml, #8-0.0 (Blank Sample diluent serves as the zero standard).
- 2. To generate standard #1, add 200 μ l of the reconstituted standard stock solution of 10ng/ml and 800 μ l of sample diluent to tube #1 for a final volume of 1000 μ l. Mix thoroughly.
- 3. Add 300 µl of sample diluent to tubes # 2-7.
- 4. To generate standard #2, add 300 μ l of standard #1 from tube #1 to tube #2 for a final volume of 600 μ l. Mix thoroughly.
- 5. To generate standard #3, add 300 μl of standard #2 from tube #2 to tube #3 for a final volume of 600 μl. Mix thoroughly.
- 6. Continue the serial dilution for tube #4-7.
- 7. Tube #8 is a blank standard to be used with every experiment.

Sample Preparation and Storage

These sample collection instructions and storage conditions are intended as a general guideline and the sample stability has not been evaluated.

Sample Type	Procedure
Cell culture supernatants	${\it Clears ample of particulates by centrifugation, assay immediately or store samples at -20 ^{\circ}C.}$
Serum	Use a serum separator tube (SST) and allow serum to clot at room temperature for about four hours. Then, centrifuge for 15 min at approximately 1,000 x g. assay immediately or store samples at -20 °C.
Plasma	Collect plasma using heparin, EDTA or citrate as an anticoagulant. Centrifuge for 15min at approximately $1,000\text{x}$ g. Assay immediately or store samples at -20°C . *Note: it is important to not use anticoagulants other than the ones described above to treat plasma for other anticoagulants could block the antibody binding site.

Sample Dilution

The target protein concentration should be estimated and appropriate sample dilutions should be selected such that the final protein concentration lies near the middle of the linear dynamic range of the assay. It is recommended to prepare 150 µl of sample for each replicate to be assayed. The samples should be diluted with sample diluent and mixed

gently



9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

Sample Collection Notes

- 1. Is is recommend that samples are immediately used upon preparation
- 2. Avoid repeated freeze/thaw cycles for all samples.
- 3. In the event that a sample type not listed above is intended to be used with the kit, it is recommended that the customer conduct validation experiments in order to be confident in the results.
- 4. Due to chemical interference, the use of tissue or cell extraction samples prepared by chemical lysis buffers may result in inaccurate results.
- 5. Due to factors including cell viability, cell number or sampling time, samples from cell culture supernatant may to be detected by the kit.
- 6. Samples should be brought to room temperature (18-25 °C) before performing the assay without the use of extra heating.
- 7. Sample concentrations should be predicted before being used in the assay. If the samples concentration is not within the range of the standard curve, users must determine the optimal sample dilutions for their particular experiments.

Assay protocol

It is recommended that all reagents and materials be equilibrated to 37° C/room temperature prior to the experiment (see Preparation Before The Experiment if you have missed this information).

- 1. Prepare all reagents and working standards as directed previously.
- 2. Remove excess microplate strips from the plate frame and seal and store them in the original packaging.
- 3. Add $100 \,\mu$ l of the standard, samples, or control per well. Add $100 \,\mu$ l of the sample diluent buffer into the control well (Zero well). At least two replicates of each standard, sample, or control is recommended.
- 4. Cover with the plate sealer provided and incubate for 120 minutes at RT (or 90 min. at 37 °C).
- 5. Remove the cover and discard the liquid in the wells into an appropriate waste receptacle. Invert the plate on the benchtop onto a paper towel and tap the plate to gently blot any remaining liquid. It is recommended that the wells are not allowed to completely dry at any time.
- 6. Add 100 μl of the prepared 1x Biotinylated Anti-Human VEGFA antibody to each well.
- 7. Cover with plate sealer and incubate for 90 minutes at RT (or 60 minutes at 37°C).
- 8. Wash the plate 3 times with the 1x wash buffer.
- a. Discard the liquid in the wells into an appropriate waste receptacle. Then, invert the plate on the benchtop onto a paper towel and tap the plate to gently blot any remaining liquid. It is recommended that the wells are not allowed to completely dry at any time.
- b. Add 300 µl of the 1x wash buffer to each assay well. (For cleaner background incubate for 60 seconds between each wash).
- c. Repeat steps a-b 2 additional times.
- 9. Add $100 \,\mu$ l of the prepared 1x Avidin-Biotin-Peroxidase Complex into each well. Cover with the plate sealer provided and incubate for $40 \,\mu$ minutes at $87 \,\mu$ minutes at $87 \,\mu$.
- 10. Wash the plate 5 times with the 1x wash buffer.
- a. Discard the liquid in the wells into an appropriate waste receptacle. Then, invert the plate on the benchtop onto a paper towel and tap the plate to gently blot any remaining liquid. It is recommended that the wells are not allowed to completely dry at any time.
- b. Add 300 µl of the 1x wash buffer to each assay well. (For cleaner background incubate for 60 seconds between each wash).
- c. Repeat steps a-b 4 additional times.
- $11. \ Add 90 \ \mu l$ of Color Developing Reagent to each well. Cover with the plate sealer provided and incubate in the dark for $30 \ minutes$ at RT(or)
- 15-25 minutes at 37°C). (The optimal incubation time must be empirically determined. A guideline to look for is blue shading the top four standard wells, while the remaining standards remain clear.)
- 12. Add 100 µl of Stop Solution to each well. The color should immediately change to yellow.
- $13. \ Within 30 \ minutes \ of stopping \ the \ reaction, \ the \ O.D. \ absorbance \ should \ be \ read \ with \ a \ microplate \ reader \ at \ 450 nm.$



9620 Medical Center Drive, Suite 200, Rockville, MD 20850 Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

Data Analysis

Average the duplicate readings for each standard, sample, and control. Subtract the average zero standard O.D. reading.

It is recommended that a standard curve be created using computer software to generate a four parameter logistic (4-PL) curve-fit. A free program capable of generating a four parameter logistic (4-PL) curve-fit can be found online at: www.myassays.com/four-parameter-logistic-curve.assay

Alternatively, plot the mean absorbance for each standard against the concentration. The measured concentration in the sample can be interpolated by using linear regression of each average relative OD against the standard curve generated using curve fitting software. This will generate an adequate but less precise fit of the data.

For diluted samples, the concentration reading from the standard curve must be multiplied by the dilution factor.

Background on VEGFA

Vascular permeability factor/vascular endothelial growth factor (VPF/VEGF), a potent cytokine expressed by most malignant tumors, has critical roles in vasculogenesis and both physiological and pathological angiogenesis. VEGF produced by tumor cells potently stimulates endothelial cell proliferation and angiogenesis and plays a key role in the pathophysiology of several neoplasias. VEGF may also play a pivotal role in mediating the development and progression of diabetic retinopathy. VEGF, a major regulator of angiogenesis, binds to two receptor tyrosine kinases, KDR/Flk-1 and Flt-1. The VEGF gene is mapped by fluorescence in situ hybridization to chromosome 6p12.