

For research use only

Fast Track Your Research.....

# **Human CD178/FasL ELISpot Pair**

Instructions for use	
Catalogue Number :	10x96 tests: EA101817

# **Table of Contents**

1.	Intended use	2
2.	Principle of the method	3
3.	Reagents provided (Contents shown for 10x96 test format)	4
4.	Materials/Reagents required but not provided	4
5.	Storage Instructions	4
6.	Safety & Precautions for use	5
7.	Reagent Preparation	6
7.1.	1X Phosphate Buffered Saline (PBS) (Coating Buffer)	6
7.2.	Skimmed milk in 1X PBS (Blocking Buffer)	6
7.3.	1% BSA PBS Solution (Dilution Buffer)	6
7.4.	0.05% PBS-T Solution (Wash Buffer)	6
7.5.	35% Ethanol (PVDF Membrane Activation Buffer)	6
7.6.	Capture Antibody	6
7.7.	Detection Antibody	6
7.8.	Streptavidin – AP conjugate	6
8.	Sample and Control Preparation	7
8.1.	Cell Stimulation	7
8.2.	Positive Assay Control, Perforin production	7
8.3.	Negative Assay Control	7
8.4.	Sample	7
10.	Reproducibility and linearity	9

## **Human CD178/FasL ELISpot Pair**

#### 1. Intended use

OriGene **ELISpot** is a highly specific immunoassay for the analysis of cytokine and other soluble molecule production and secretion from T-cells at a single cell level in conditions closely comparable to the *in-vivo* environment with minimal cell manipulation. This technique is designed to determine the frequency of cytokine producing cells under a given stimulation and the comparison of such frequency against a specific treatment or pathological state. The ELISpot assay constitutes an ideal tool in the investigation of Th1 / Th2 responses, vaccine development, viral infection monitoring and treatment, cancerology, infectious disease, autoimmune diseases and tranplantation.


Utilising sandwich immuno-enzyme technology, OriGene ELISpot assays can detect both secreted cytokines and single cells that simultaneously produce multiple cytokines. Cell secreted cytokines or soluble molecules are captured by coated antibodies avoiding diffusion in supernatant, protease degradation or binding on soluble membrane receptors. After cell removal, the captured cytokines are revealed by tracer antibodies and appropriate conjugates.

This kit has been configured for research use only and is not to be used in diagnostic procedures.

## 2. Principle of the method

A capture antibody highly specific for the analyte of interest is coated to the wells of a PVDF bottomed 96 well microtiter plate either during kit manufacture or in the laboratory. The plate is then blocked to minimise any non-antibody dependent unspecific binding and washed. Cell suspension and stimulant are added and the plate incubated allowing the specific antibodies to bind any analytes produced. Cells are then removed by washing prior to the addition of Biotinylated detection antibodies which bind to the previously captured analyte. Enzyme conjugated streptavidin is then added binding to the detection antibodies. Following incubation and washing substrate is then applied to the wells resulting in coloured spots which can be quantified using appropriate analysis software or manually using a microscope.

1. 96-PVDF bottomed-well plates are first treated with 35% ethanol and then coated with capture antibody



Capture antibody

Antigen / Mitogen



Biotinylated detection antibody




Streptavidin - alkaline phosphatase conjugated




Substrate product


Incubation of cells in the coated microwell




3. Cell removal by washing. Incubation with biotinylated antibody



4. Incubation with streptavidin – alkaline phosphatase conjugated

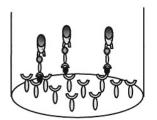

5. Addition of substrate BCIP/NBT and monitoring of spot formation.

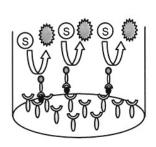



## 3. Reagents provided (Contents shown for 10x96 test format)

- Capture Antibody (2 vials of 0.5ml). The antibody is supplied sterile and does not contain preservative. We strongly advise sterile pipetting.
- Biotinylated detection antibody (2 vials, lyophilised)

## 4. Materials/Reagents required but not provided

- Miscellaneous laboratory plastic and/or glass, if possible sterile
- Streptavidin-Alkaline Phosphatase conjugated
- Bovine Serum Albumin (BSA)
- Substrate solution (BCIP/NBT)
- Ethanol
- Cell culture reagents (e.g. RPMI-1640, L-glutamine, FCS)
- Cell stimulation reagents (anti-CD3, IL-2, PMA, Ionomycin)
- CO<sub>2</sub> incubator
- Tween 20
- Phosphate Buffered Saline (PBS)
- 96 well PVDF bottomed plates (we recommended Millipore plates catalogue # MSIPN4510, MSIPS4510 and M8IPS4510)

## 5. Storage Instructions

Store reagents between 2 and 8°C. Immediately after use remaining reagents should be returned to cold storage (2 to 8°C). Expiry of the components is stated on box front label and can only be guaranteed if the components are stored properly, and if in the case of repeated use of one component, the reagent is not contaminated by the first handling.

## 6. Safety & Precautions for use

- For research use only not to be used as a diagnostic test
- Handling of reagents, serum or plasma specimens should be in accordance with local safety procedures, e.g.CDC/NIH Health manual: "Biosafety in Microbiological and Biomedical Laboratories" 1984
- Do not eat, drink, smoke or apply cosmetics where kit reagents are used
- Do not pipette by mouth
- When not in use, kit components should be stored refrigerated or frozen as indicated on vials or bottles labels
- All reagents should be warmed to room temperature before use.
- · Cover or cap all reagents when not in use
- Do not mix or interchange reagents between different lots
- Do not use reagents beyond the expiration date of the kit
- Use a clean disposable plastic pipette tip for each reagent, standard, or specimen addition in order to avoid cross contamination
- Use a clean plastic container to prepare the washing solution
- Thoroughly mix the reagents and samples before use by agitation or swirling
- All residual washing liquid must be drained from the wells by efficient aspiration or by decantation followed by tapping the plate forcefully on absorbent paper. Never insert absorbent paper directly into the wells
- When pipetting reagents, maintain a consistent order of addition from well-to-well. This will ensure equal incubation times for all wells
- **BCIP/NBT buffer** is potentially carcinogenic and should be disposed of appropriately, caution should be taken when handling this reagent, always wear gloves
- Follow incubation times described in the assay procedure

## 7. Reagent Preparation

#### 7.1. 1X Phosphate Buffered Saline (PBS) (Coating Buffer)

For 1 litre of 10X PBS weigh-out: 80g NaCl

2g KH<sub>2</sub>PO<sub>4</sub>

14.4g Na<sub>2</sub>HPO<sub>4 2</sub>H<sub>2</sub>O.

Add distilled water to 1 litre. Adjust the pH of the solution to 7.4 +/- 0.1 were required.

Dilute the solution to 1X before use.

#### 7.2. Skimmed milk in 1X PBS (Blocking Buffer)

For one non sterile plate dissolve 0.2g of powder in 10ml of 1X PBS

For one sterile plate dilute 5ml of liquid milk in 5ml of 1X PBS

#### 7.3. 1% BSA PBS Solution (Dilution Buffer)

For one plate dissolve 0.2 g of BSA in 20 ml of 1X PBS.

#### 7.4. 0.05% PBS-T Solution (Wash Buffer)

For one plate dissolve 50µl of Tween 20 in 100mL of 1X PBS.

#### 7.5. 35% Ethanol (PVDF Membrane Activation Buffer)

For one plate mix 3.5 ml of ethanol with 6.5 ml of distilled water.

#### 7.6. Capture Antibody

This reagent is supplied sterile once opened keep the vial sterile or aliquot and store at -20°C. For optimal performance prepare the Capture Antibody dilution immediately before use.

Dilute 100µl of capture antibody in 10 mL of 1X PBS and mix well.

## 7.7. Detection Antibody

Reconstitute the lyophilised antibody with 0.55mL of distilled water. Gently mix the solution and wait until all the lyophilised material is back into solution.

If not used within a short period of time, reconstituted Detection Antibody should be aliquoted and stored at -20°C. In these conditions the reagent is stable for at least one year. For optimal performance prepare the reconstituted antibody dilution immediately prior to use.

Dilute 100µl of antibody into 10ml Dilution Buffer and mix well.

#### 7.8. Streptavidin – AP conjugate

Dilute in Dilution buffer according to the instructions of the supplier.

## 8. Sample and Control Preparation

#### 8.1. Cell Stimulation

Cells can either be stimulated directly in the antibody coated wells (Direct) or, first stimulated in 24 well plates or flask, harvested, and then plated into the coated wells (Indirect).

The method used is dependent on 1) the type of cell assayed 2) the expected cell frequency. When a low number of cytokine producing cells are expected it is also advised to test them with the direct method, however, when this number is particularly high it is better to use the indirect ELISpot method.

All the method steps following stimulation of the cells are the same whatever the method (direct/indirect) chosen.

#### 8.2. Positive Assay Control, Perforin production

We recommend using the following polyclonal activation as a positive control in your assay.

We recommend to first pre stimulate PBMC at  $1x10^6$  cells per ml in culture media (e.g. RPMI 1640 supplemented with 2mM L-glutamine and 10% heat inactivated fetal calf serum) containing anti CD3 antibody (we suggest to use B-B11, ref. 854.010.000,at 1µg/ml) and IL-2 at 20 ng/ml for 3 days. Then wash the cells once to remove the stimulating antibody and dilute the cells in media containing IL-2 only for 24 hours . Harvest cells and resuspend in culture media added with 5ng/ml PMA and 500ng/ml ionomycin (Sigma, Saint Louis, MO). Distribute  $1x10^4$  to  $3x10^4$  cells per  $100\mu$ l in required wells of an antibody coated 96-well PVDF plates and incubate for 15-20 hours in an incubator.

For antigen specific stimulation, the optimal concentration of the antigen and the optimal concentration of number of cells have to be determined experimentally as it is depending of the frequency of the cytokine producing cells.

#### 8.3. Negative Assay Control

Dilute PBMC in culture media to give an appropriate cell number (same number of unstimulated cells as stimulated sample cells) per  $100\mu$ l with no stimulation.

#### 8.4. Sample

Dilute PBMC in culture medium and stimulator of interest (i.e. Sample, Vaccine, Peptide pool or infected cells) to give an appropriate cell number per 100µl.

Optimal assay performances are observed between 1x10<sup>5</sup> and 2.5x10<sup>5</sup> cells per 100μl.

Stimulators and incubation times can be varied depending on the frequency of cytokine producing cells and therefore should be optimised by the testing laboratory.

#### 9. Method

Prepare all reagents as shown in section 7 and 8.

Note: For optimal performance prepare the Streptavidin-AP dilution immediately prior to use

Assay Step		Details				
1.	Addition	Add 25µl of 35% ethanol to every well				
2.	Incubation	Incubate plate at room temperature (RT) for 30 seconds				
3.	Wash	Empty the wells by flicking the plate over a sink & gently tapping on absorbent paper. Thoroughly wash the plate 3x with 100μl of 1X PBS per well				
4.	Addition	Add 100μl of diluted <b>capture antibody</b> to every well				
5.	Incubation	Cover the plate and incubate at 4°C overnight				
6.	Wash	Empty the wells as previous and wash the plate once with 100μl of 1X PBS per well				
7.	Addition	Add 100μl of <b>culture media with 10% serum</b> to every well				
8.	Incubation	Cover the plate and incubate at RT for 2 hours				
9.	Wash	Empty the wells as previous and thoroughly wash once with 100µl of 1X PBS per well				
10.	Addition	Add 100µl of <b>sample</b> , <b>positive and negative controls</b> cell suspension to appropriate wells providing the required concentration of cells and stimulant (cells may have been previously stimulated see section 8.)				
11.	Incubation	Cover the plate and incubate at 37°C in a CO <sub>2</sub> incubator for an appropriate length of time (15-20 hours).  Note: do not agitate or move the plate during this incubation				
12.	Addition	Empty the wells and remove excess solution then add 100µl of PBS-T to every well				
13.	Incubation	Incubate the plate at 4°C for 10 min				
14.	Wash	Empty the wells as previous and wash the plate 3x with 100μl of PBS-T				
15.	Addition	Add 100μl of diluted <b>detection antibody</b> to every well				
16.	Incubation	Cover the plate and incubate at RT for 1 hour 30 min				
17.	wash	Empty the wells as previous and wash the plate 3x with 100μl of PBS-T				
18.	Addition	Add 100μl of diluted <b>Streptavidin-AP conjugate</b> to every well				
19.	Incubation	Cover the plate and incubate at RT following the supplier instructions				
20.	Wash	Empty the wells and wash the plate 3x with 100µl of PBS-T				
21.	Wash	Peel of the plate bottom and wash both sides of the membrane 3x under running distilled water, once washing complete remove any excess solution by repeated tapping on absorbent paper.				
22.	Addition	Add 100μl of ready-to-use <b>BCIP/NBT buffer</b> to every well				
23.	Development	Incubate the plate for <b>5-15 min</b> monitoring spot formation visually throughout the incubation period to assess sufficient colour development				
24.	Wash	Empty the wells and rinse both sides of the membrane 3x under running distilled water. Completely remove any excess solution by gentle repeated tapping on absorbent paper				

**Read Spots**: allow the wells to dry and then read results. The frequency of the resulting coloured spots corresponding to the cytokine producing cells can be determined using an appropriate ELISpot reader and analysis software or manually using a microscope.

Note: spots may become sharper after overnight incubation at 4°C

Plate should be stored at RT away from direct light, but please note colour may fade over prolonged periods so read results within 24 hours.

## 10. Reproducibility and linearity

Intra-assay reproducibility and linearity were evaluated by measuring the spot development following the stimulation (PMA / Ionomycin) of 5 different PBMC cell concentrations, 12 repetitions in 1 batch. The data shows the mean spot number, range and CV for the six cell concentrations.

Cells / well	n	Mean number of spots per well	Min	Max	CV%
25000 recommended	12	871	837	908	3.1
12500 recommended	12	833	796	891	4.4
6250	12	723	647	825	9.7
3125	12	517	461	577	8.7
1560	12	294	258	320	7.5

#### **TECHNICAL CONSULTATION**

OriGene Technologies, Inc. 9620 Medical Center Dr., Suite 200 Rockville, MD 20850

Phone: 1.888.267.4436 Fax: 301-340-9254 Email: techsupport@origene.com Web: www.origene.com

FOR RESEARCH USE ONLY NOT FOR USE IN DIAGNOSTIC PROCEDURES